

H50

USER GUIDE

GPS HANDHELD

Shot Scope



Contents

Inside the box	2
Navigation	3
Setting Up Your H50	7
The Shot Scope App and Dashboard	12
Before You Play For The First Time	14
At The Course	18
Settings	30
Main Menu	36
Post Round	38
Terms and Conditions	41

Page

Inside the box

H50

- 1x Shot Scope H50 GPS handheld
- 1x USB-C Charging Cable
- 1x Cleaning Cloth



Navigation



Navigation

The Shot Scope H50 uses three physical buttons and a touchscreen to help you navigate menus, make selections, and control the device.

Button functions:

Top right button = Power On / Off

Left side buttons = Change hole



Left Side



Right Side

Touchscreen controls

 
The touchscreen behaves similarly to a smartphone, allowing:

Tapping to select options

Swiping to move between screens

Scrolling to view longer lists or pages

Drag-and-drop actions where supported

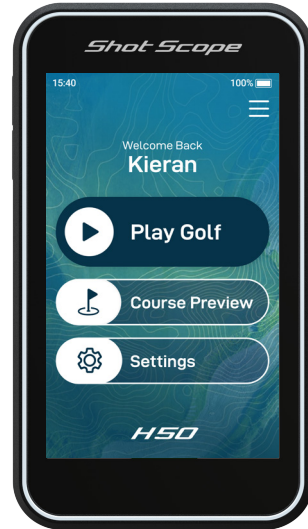


Power On / Off

To power on:


Press the top right button

To power off:

 Open the Settings menu and select Power Off or hold the power button down until device shuts down.

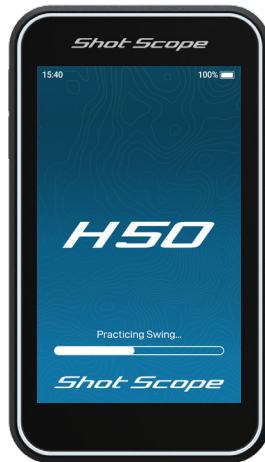


Power On

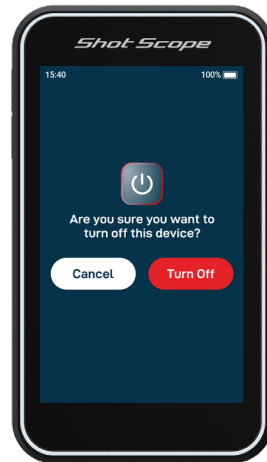 

Power Off

 Setting Up Your H50

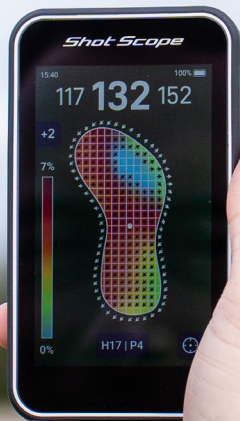

Setting Up Your H50

Step 1: Download and install the mobile app

Shot Scope provides both an Android and iOS app. To download or install the Shot Scope app, simply search for Shot Scope on either the App Store or the Google Play Store.



 
Register

To register an account, open the app and then click on the 'Register' button. Complete all sections and then press the 'Continue' button. Your password must contain at least one letter and one number.

Step 2: Complete the tutorial on the app

The first time you enter the Shot Scope app after registering, you will be taken through a tutorial showing you how to use the H50 and app. During this process, you will turn on your H50 and pair the device with the app. You will choose the settings for your H50 and sync the handheld to ensure it has the latest firmware installed. You must complete this process before using the H50.

If you have to update firmware, once this process is completed, you will need to connect your device again by tapping the 'connect device' button.

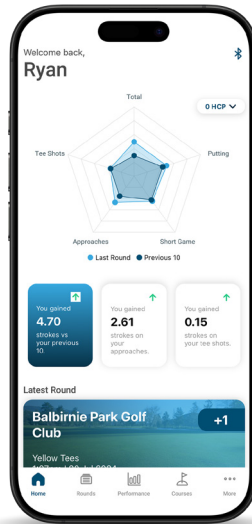


Step 3: Connecting the H50 to the app

If you have just completed the tutorial, your H50 will reboot to complete onboarding. If you need to reconnect the device to the mobile app, ensure Bluetooth is turned on in your phone settings, log into the app and then press the 'Connect' button at the top of the screen. The H50 screen will then change to show the connection has been secured.

Step 4: Check course maps

 
We recommend that you check the mapping status of any courses you intend to play 48 hours before your tee off time. This is to ensure that the course is in the system and has been mapped. While most courses will be mapped and already available on the H50, occasionally there will be a new course that isn't on the system or your course may have an update pending. To view the list of mapped courses on the Shot Scope system, navigate to the 'Courses' section in the app. This is accessed by clicking 'Courses' on the tab bar at the bottom of the app.

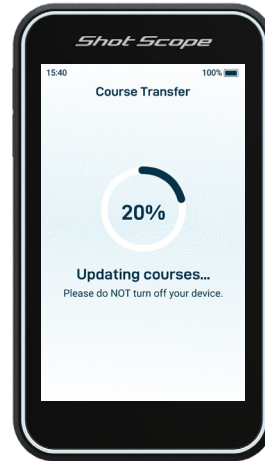

Step 5: Searching for, subscribing, and adding a course

You can search our course database by entering the name of the course or using your location to find nearby courses. Either use the search bar or the filter at the top right of the screen to find courses by proximity to your current location. To make sure you always have the most up to date course maps, subscribe to any course that you play frequently to get notifications when the map has been updated. To subscribe, tap 'Subscribe' next to the course name and it will be added to the sync waiting list if there's an update available for the course. If your course is mapped but not yet on the H50, the course will have an 'add' button beside it, tap this and the course will be added to your ready to sync waiting list. We may have your course in the database but it has not yet been mapped. In this situation, the course will have a 'request' button beside it, tap this to request the course be mapped. This will notify the mapping team who will endeavour to get any course mapped in 48 hours.

 
If you can't find the name of the course, press 'Request' at the bottom of the screen. This will bring up a form that can be filled out and sent to our mapping team who will map your course.

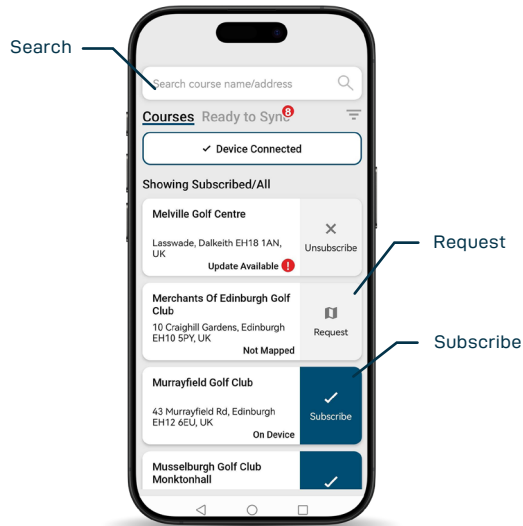

Step 6: Syncing course changes

If you have any course maps that need to be uploaded to the H50, or any updates that need to be transferred to the handheld, you should see a red notification at the top of the courses screen. If you wish to sync then tap 'Ready to Sync' to navigate to the ready to sync waiting list.

 On the resulting screen, you will see the list of courses that require a sync. Press the 'Tap to Sync' next to the course you want to update and sync will begin. You can sync as many or as few in this waiting list as you wish.

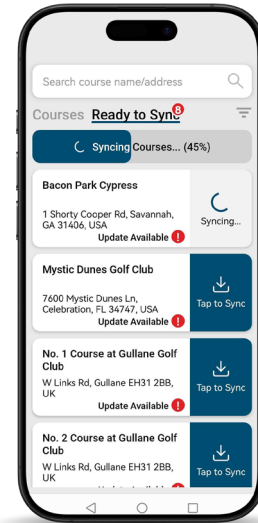

The Shot Scope App and Dashboard



The Shot Scope App and Dashboard

Download or update your mobile app

 
As we routinely update our mobile app to improve usability and add new features, please make sure you have the most recent version installed on your iOS or Android device. To upload rounds you must use the mobile app. You can still view and edit your round on the Performance Dashboard (shown on the right) which can be accessed via web browser on a computer or tablet.

Shot Scope mobile app

Provides a quick overview of your key statistics. Used to set up your account, update firmware, update courses, and upload rounds.

Shot Scope dashboard

A more detailed analysis of your statistics.
Available to view online at:
<https://dashboard.shotscope.com>

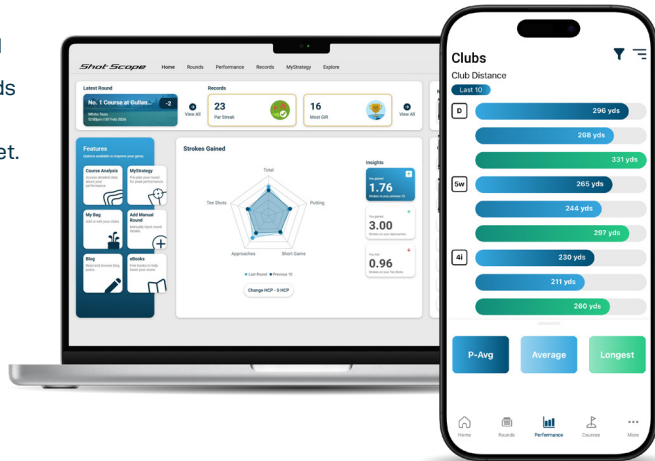

Before You Play For the First Time



Before You Play For The First Time

Step 1: Charging your Shot Scope H50

Your H50 can be charged from any USB port or USB compliant wall charger. A USB-C charger is included, and the H50 is compatible with any standard USB-C charger.

Plug the charger into the charging port on the bottom of the Handheld device; the screen will show charging has commenced if connected successfully.



Step 2: Setting up My Bag

My Bag is a feature available on the Shot Scope dashboard and mobile apps that allows you to create a complete database of your clubs and analyse how they perform over time.

With My Bag, you can:

- Add an unlimited number of clubs
- Track performance data for each club
- Compare performance between clubs

 
Using My Bag Without Tags

If you don't use physical tags, you'll still set up My Bag by assigning clubs to tags. Why Assign Clubs to Tags?

Assigning a club to a tag makes it active in-game. This means:

- Only assigned clubs can be selected when entering shots
- Shot data is linked to the correct club
- Your setup stays consistent if you add tags or switch products

Think of tag assignment as a way to activate clubs in the system—even without a physical tag.

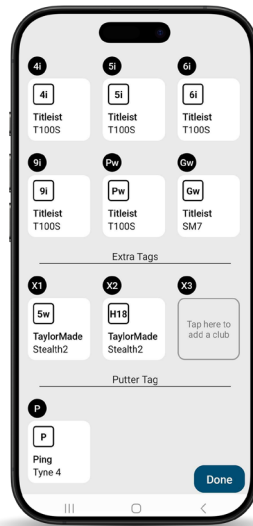

Step 1: Add & Assign Clubs

Select a club tag and add the club you want to be assigned to this tag.

- Any club can be added to any tag; however, the putter must be added to the putter tag. For simplicity, we recommend assigning all clubs to their corresponding tag.

You can add new clubs and update assignments at any time.

Step 2: Enter Your Data

Manually enter your shots during or after your round using the assigned clubs.

Step 3: Review and Compare Performance

Review club performance and compare similar clubs over time.



At The Course



At The Course

Step 1: Getting ready to play

Power on: Turn on your H50 by pressing the top right button.

Play Golf: Tap Play Golf on the home screen.

Step 2: Round set up

Once the H50 has acquired a GPS signal, you will be prompted to select the course you are playing.

 
Tap the Play icon next to the course name to confirm your selection.

Choose Your Game Mode

Select the mode you want to use for your round:

GPS Round – Provides standard GPS features without recording shots.

Shot Tracking – Includes all standard GPS features plus manual performance tracking.

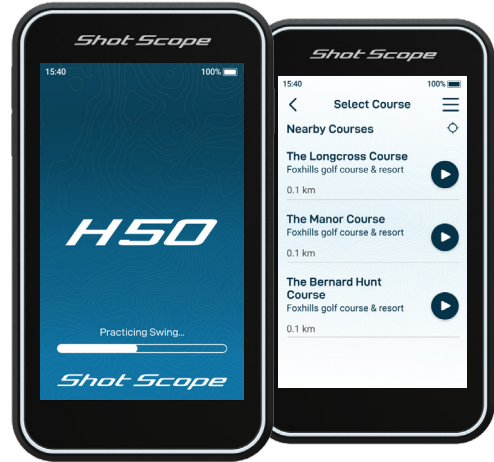

Customise Your Round Settings

After selecting the game mode, choose the settings you want for the round:

Tees – Select the tee box you will play from.

Competition Mode – Enables settings required to make the round conform to the Rules of Golf.

 
Scoring – Turn on to record your score in the digital scorecard.

Plays Like Distances – Shows adjusted distances based on elevation changes.

Hazard Labels – When enabled, dropping the crosshair on a hazard displays distances to the front and back.

Green Slope – Choose whether to display a heat map and elevation data when zoomed in on the green, or to show only the green's shape

Units – Choose between yards or metres for distance measurements.

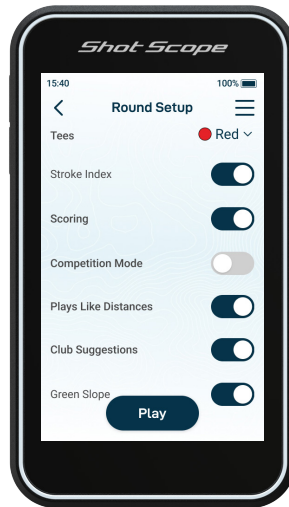

Zoom to Green Distance - Select how close you need to be to the green before the screen switches from the full hole view to the green view.

Default Arc Distance - Set the distance you'd like the default distance arc to show on the screen.

 
Set Target Distance - Select the distance at which the target crosshair initially appears on each hole before you move it. It's recommended to set this close to your typical tee-shot distance to reduce the need for adjustments.

Club Distances:

Manual – Uses distances you manually entered on the device.

P-Avg – Uses your performance-average distances from your Shot Scope account.

Once your selections are set, tap Play at the bottom of the screen.

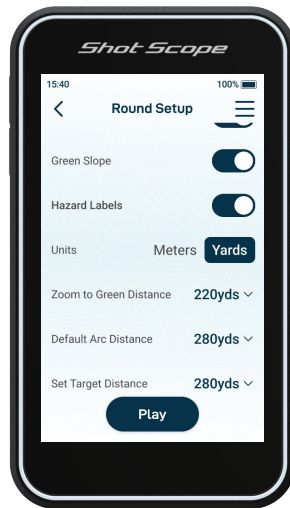

Step 3: During play

F/M/B

F/M/B distances are displayed at the top of the screen:

Left number: Distance to the Front of the green

Middle number: Distance to the Middle of the green

Right number: Distance to the Back of the green

- 1 F/M/B Distance
- 2 Score
- 3 Distance left to pin from target
- 4 Distance to the target
- 5 NC Non conforming warning
- 6 Hole/ Par number
- 7 Action button

 
Screen Lock

Press the top right power button to lock and unlock the screen.



Scorecard

You can access the scorecard and edit your score by tapping the score to par icon on the main yardages screen.

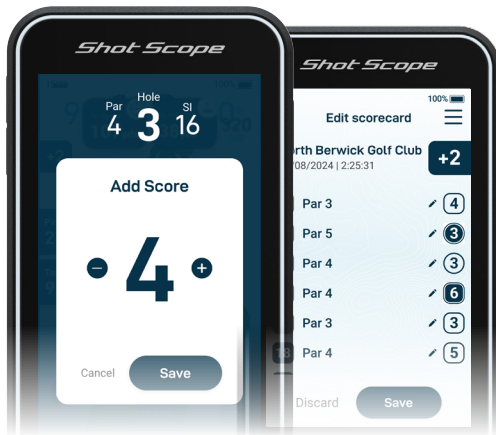


Distance left to pin from target

Displays the distance between the target crosshair and the selected pin location on the green.

Distance to the target

 Displays the distance from your current location to the target crosshair.

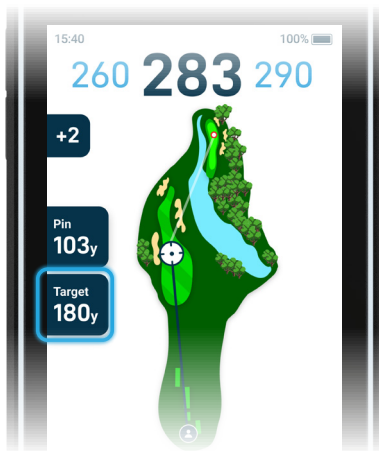

Non conforming warning

If any settings are enabled that make the device non-conforming to the Rules of Golf, an **NC** warning will be displayed on the screen.

Hole Indicator

The hole indicator appears at the bottom of the screen, allowing you to quickly see which hole you are currently playing. To manually change the hole, tap the hole indicator at the bottom of the screen and select the correct hole number.



Action button

The action button bottom right will expand when tapped and give the following options:

Add shot

Layups

Distance arcs

Last shot

Shot Tracking

Shot tracking in the H50 is manual and requires you to add your shots using the H50 menu.

Adding shots

 
To add a shot select the add shot option from the action button.




Action Button

Then select what club you are hitting from the club menu.

After selecting the club move the shot to where you last hit the shot, the shot will automatically be placed at your location on the map.

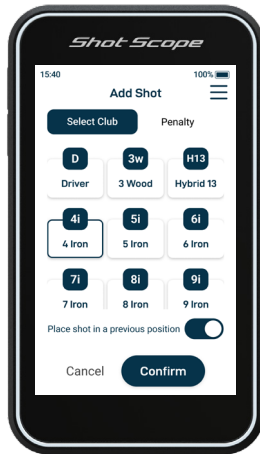

Select Club

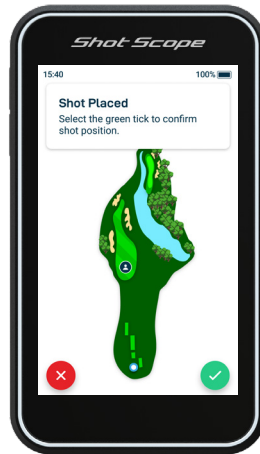 

Confirm Shot Placement

Adding penalties

 
You can add penalties the same way you add a shot. Navigate to the add shot menu and from there change to penalties.

You can then choose from different penalty options including a drop ball.


Adding to a previous shot

You can also attach the penalty to the previous shot if you forget to add it manually.

Attach to a previous shot

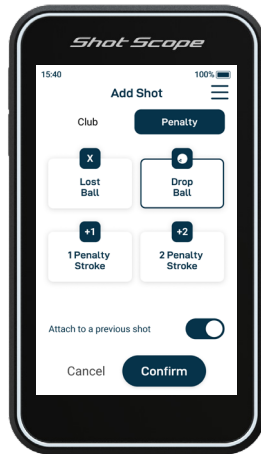

Select Penalty

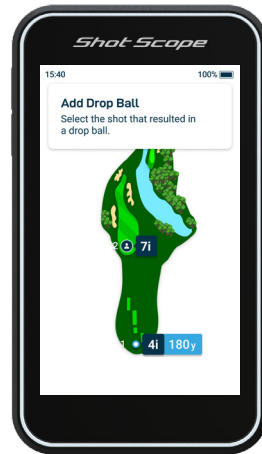 


Confirm Penalty

Putting


When you get to the green you will be able to add putts wherever you hit them from. Simply tap to add putts and then confirm once you are happy with the number and placement of your putts.

Pin Placement

 On the H50 the pin is automatically placed in the center of the green. Simply move the pin to the exact location to confirm it's placement.

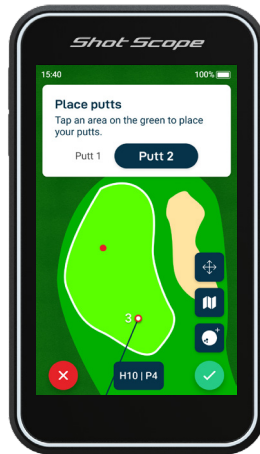

Placing Putts

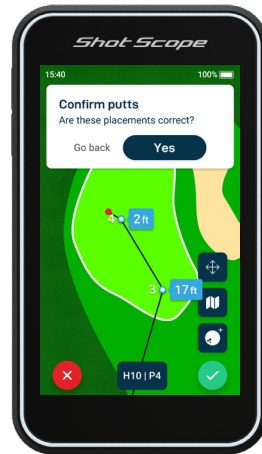 

Confirm Putts

 
Scoring

The H50 lets you record your round in a digital scorecard whilst you play.


When you finish a round you will be prompted to tell the H50 your score for the hole and how many putts you had.

If you are shot tracking it will already have your score based off your shots and putts added. You can still edit it at the end of every hole.

If you realise you have entered a score incorrectly you can go back in and edit your scorecard at any time during your round. Simply navigate to scorecard in the action menu and choose what hole you'd like to edit.

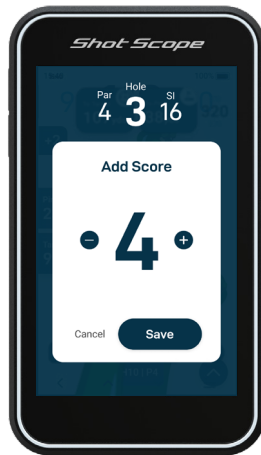


Adding Score

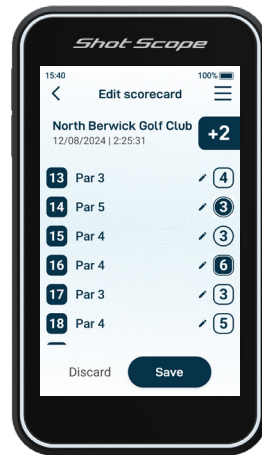 

Edit Scorecard Menu

 Settings

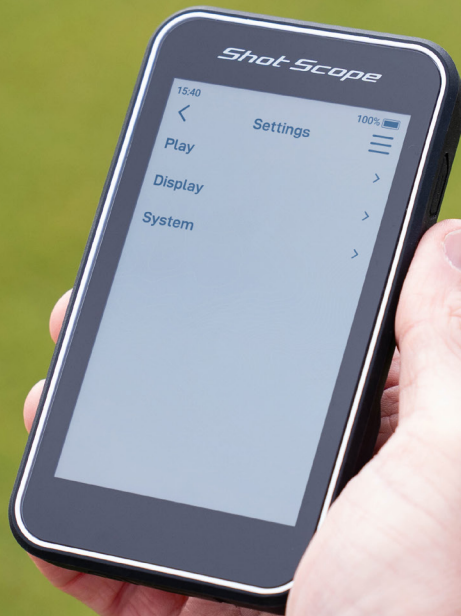

Settings

Settings Options

In the settings menu you can customise your experience to suit your needs. There are 3 main sections to choose from:

Play

 
Change your in game preferences including turning on competition mode for competitive rounds.

Display

Customise how your H50 looks including screen brightness and map color.

System

Change settings like what language you need, time format and check current firmware.

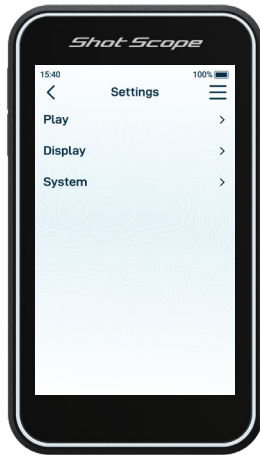


Settings

Play

Change your in game preferences including turning on competition mode for competitive rounds.

Here you can change:

 - Tees
- Competition mode
- Scoring
- Plays like distances
- Hazard labels
- Club suggestions
- Club distances
- Manual
- P-Avg
- Green slope
- Hazard labels
- Units
- Green view
- Default Arc distance
- Set Target Distance

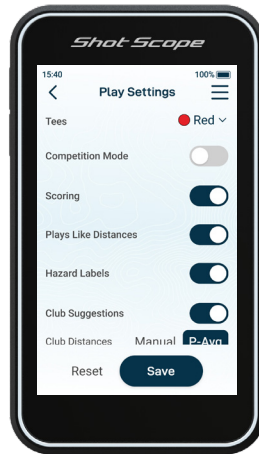

Play Settings

Display

In this menu you can change various settings to customise the H50's display to your general preference. The options are:

Battery Saving Mode - Turn On / Off to conserve battery.

Brightness - Adjust the screen brightness. Higher brightness levels will use more battery power.

 
Change View Button - Turn On / Off.

Pinned action buttons - choose which button you want to pin to the main screen.

Display units - Toggle between numeric-only distances or distances shown with units.

Auto Lock - Set the time before the device locks when not in use.


Auto Dim - Set the time before the device dims when not in use.

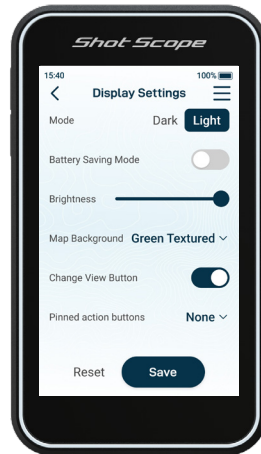


Display Settings

Map color

 You can change the color of the background in the display menus. This option is down to personal preference and you have 3 choices:

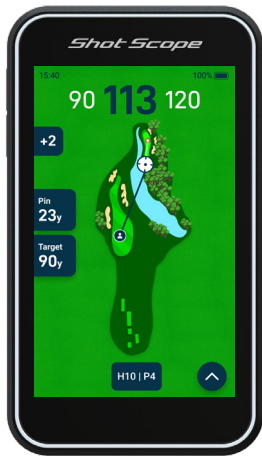

Green

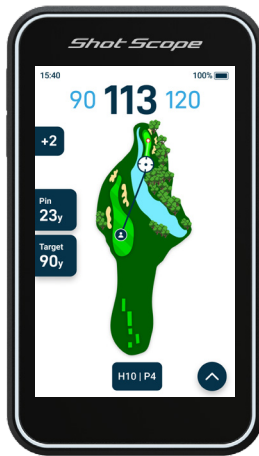 

White



 
Black

System

Language - Choose the display language.


Time Format - Select a 12-hour or 24-hour time format.

Firmware - Displays the current firmware version installed on the device.

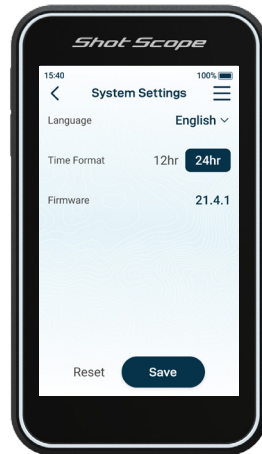

Display Settings

 Main Menu

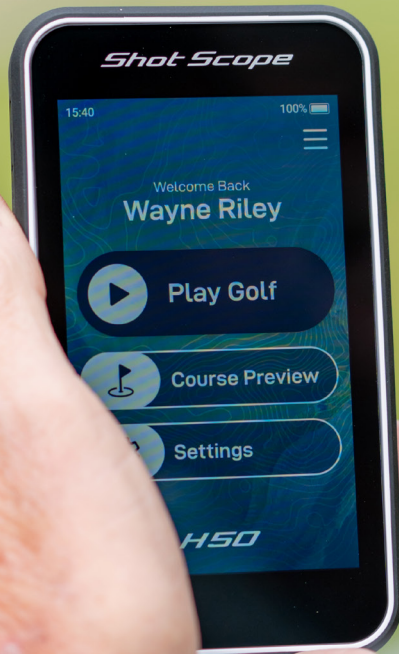

Main Menu

Main Menu

The main menu (top right corner) allows you to easily access what you need. The options in this menu are:

Power OFF

Select this option to shut down the device.

Home

Select this option to return to the Home screen.

Round History

 
Select this option to view rounds that have been played but not yet uploaded to the app.

Club Distances

Enter the distance you hit each club so the data can be used for club recommendations and distance arcs.

Settings

Select this option to open the full settings menu.

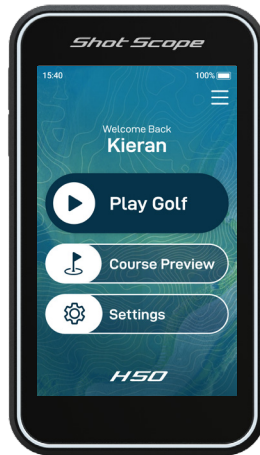

Main Menu

Post Round



 
Post Round

Uploading your data

Before uploading your round, first make sure that you have your H50 turned on and next to your mobile phone (ensure you have Bluetooth enabled on your phone settings). Next, log into your app and tap the 'Connect Device' button at the top of the screen. The screen will then change to show that a sync is waiting, tap the sync button to start the round sync. You will see a progress bar and when this has completed the round will be uploaded to your account.

Editing data

All rounds that you upload must be signed off before they are included in your stats. This process ensures that all of your data is completely accurate. Rounds that have not been signed off are identified by an orange scorecard icon on both your online dashboard and mobile app. To begin the 'Sign Off' process on the dashboard, click on the card of the round you wish to sign off and then select 'Edit/Sign off' found below the map. On mobile, tap on the round card and then tap the pencil icon on the round overview page. This opens a scorecard for your round. On this scorecard there is a five-step process. We recommend editing using the dashboard on a computer, this is the easiest way to edit.

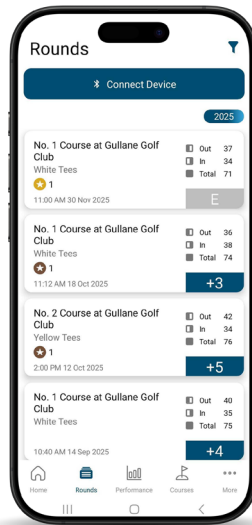

Step 1: Select your handicap from the dropdown.

Step 2: Select which tees you played from, several options are included on the drop down list. If the tees you played from aren't present, click on the plus icon to create a new set. When creating a new set of tees, make sure all the pars for each hole are correct before going forward.

Step 3: Once you reach step three, the edit button will be enabled. Click this button to begin making edits to your round. In order to 'sign off' your round you must view at least one hole in editing, however, we do recommend reviewing all holes to ensure data is correct.

Step 4: Once you have edited your round, you must decide whether or not to include the round in your performance statistics. This shall be set to include as default. To discount the round, simply move the slider on dashboard or un-tick the box on mobile.

Step 5: Press 'sign off' to complete the process. To find out more about editing and signing off please visit: support.shotscope.com



Shot Scope Technologies Ltd

LIMITED WARRANTY & SAFETY INFORMATION

FOR CONSUMERS PROTECTED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE. THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS.

Shot Scope Technologies Ltd products are warranted to be free from defects in materials, components and workmanship through normal use. The Warranty Period begins on the date of purchase from Shot Scope Technologies Ltd and lasts for a period of (24) months for a new product.

If a defect in material, component or workmanship is discovered within the Warranty Period you must notify Shot Scope Technologies Ltd in writing. In no event shall such notifications be received by Shot Scope Technologies Ltd later than 14 days after the expiration of the Warranty Period. Shot Scope Technologies Ltd will, at its sole option, repair or replace any materials or components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labour, provided that the customer shall be responsible for any shipping and transportation cost. All returns must be shipped to Shot Scope Technologies Ltd service centre for assessment prior to repair or replacement.

The product is intended to be used only as a GPS distance measuring device for sport and must not be used for any other purpose requiring precise measurement of direction, distance, location or topography. Shot Scope Technologies Ltd makes no warranty as to the accuracy or completeness of map data in this product.

Shot Scope Technologies Ltd retains the exclusive right to repair or replace (with a new or newly-overhauled replacement product) the device or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY. Contact support@shotscope.com for a returns form and further instructions. A copy of the original sales receipt, is required as the proof of purchase for warranty services. The customer is responsible for all shipping and transportation costs, for shipping details contact Shot Scope Technologies Ltd.

EXCLUSIONS AND LIMITATIONS

This limited warranty extends only to products purchased from Shot Scope Technologies Ltd or an authorized reseller.

This warranty does not apply to: (i) cosmetic damage such as scratches and dents; (ii) consumable parts, such as batteries, unless product damage has occurred due to a defect in materials, component or workmanship; (iii) damage caused by accident, abuse, water, flood, fire, or other acts of nature or external causes; (iv) damage caused by service performed by anyone who is not an authorized service provider

of Shot Scope Technologies Ltd; (v) damage to a product that has been modified or altered without written permission of Shot Scope Technologies Ltd; or (vi) damage to a product that has been not been charged or powered in accordance with the charging and powering instructions provided by Shot Scope Technologies Ltd; (vii) the product is supplied or licensed for beta, evaluation, testing or demonstration purposes for which Shot Scope Technologies Ltd does not charge a purchase price.

To the maximum extent permitted by applicable law.

All software and services provided by Shot Scope Technologies Ltd, including factory loaded software is provided "AS IS" without warranty of any kind. Without limiting the foregoing, Shot Scope Technologies Ltd does not warrant that the operation of the product, software or services will be error free. Shot Scope Technologies Ltd does not warrant that any equipment, system or network that the product software or services are used in conjunction with will be error free.

TO THE EXTENT NOT PROHIBITED BY APPLICABLE LAW

ALL IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE WARRANTY PERIOD. ALL OTHER EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF NON-INFRINGEMENT ARE DISCLAIMED.

To the extent not prohibited by applicable law, in no event will Shot Scope Technologies Ltd be liable for; (i) lost or erased data in connection with repair or replacement of a device; (ii) loss of revenue or profit; (iii) loss of the ability to use third party products or services; (iv) or for special, indirect, consequential, incidental or punitive damages, regardless of the theory of liability (including negligence). In the event where Shot Scope Technologies Ltd has been advised of the possibility of damages. To the extent not prohibited by applicable law, in no event will Shot Scope Technologies Ltd liability exceed the amount paid by you the consumer for the product.

Unless modified in writing by Shot Scope Technologies Ltd this limited warranty is understood to be the complete and exclusive agreement between you and Shot Scope Technologies Ltd. Superseding all prior agreements, oral or written, and all other communications between you and Shot Scope Technologies Ltd. No Shot Scope Technologies Ltd employee, agent or reseller is authorized to make any verbal or written modification, extension or addition to this limited warranty.

ONLINE AUCTION PURCHASES

Products purchased through online auctions are not eligible for warranty coverage. Online auction confirmations are not accepted for warranty verification. To obtain warranty services, an original or copy of the sales receipt from the original retailer is required.

TECHNICAL SUPPORT

This limited warranty is neither a service nor a support contract. Answers to technical support questions can be found at:

support.shotscope.com

SAFETY INFORMATION & HEALTH WARNINGS

For your personal safety and to avoid damage to device follow safety information guidelines detailed below.

Failure to avoid the following potentially hazardous situations could result in serious injury:

- Always consult your Physician/Doctor before beginning or modifying any exercise program. If you have a pacemaker or other implanted electronics device, consult your Physician/Doctor before using any electronic devices from Shot Scope Technologies Ltd.
- Do not clean or wear the device when you are charging it. Always unplug the device first before cleaning it.
- Do not expose the device or any other electronics product used to charge the device to liquid, moisture, humidity, or rain whilst charging the device. Exposure to water or moisture during charging could result in damage to the electronics circuits and may result in failure or explosion.
- Only use the device as detailed in the user manual.

BATTERY WARNINGS

If these guidelines are not followed, the internal lithium-ion battery may experience a shortened life span or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not charge or use the unit in a car or similar place where the inside temperature may be over 45 degrees Celsius (113°F). To prevent damage, remove the device from the vehicle or store it out of direct sunlight, such as in the glove box.
- Do not disassemble, modify, re-manufacture, puncture or damage the device.
- Do not short circuit the battery or device by bringing the terminals in contact with metal or another object. This could cause personal injury, explosion or fire.
- Do not immerse or expose the device to water, other liquids, fire, explosion, or any other hazard.
- Do not shock the battery by dropping or throwing it.
- Do not operate the device outside of the temperature ranges specified in the temperature specifications in this manual.
- If the device or battery shows any type of damage, such as bulging, swelling or disfigurement. Discontinue use immediately and contact Shot Scope Technologies Ltd.
- Keep any exposed battery out of reach of infants or small children.

CARE GUIDELINES

- Avoid extreme shock and harsh treatment, because it can degrade the life of the device.
- Only use a damp cloth or paper towel with water to clean the device. Do not spray with any chemicals to clean the device.
- Do not expose the device to extremely high or low temperatures.
- Do not bring the device into contact with any sharp objects. This could cause damage or scratches.
- Do not attempt to repair, modify or disassemble your Shot Scope device; it does not contain any user-serviceable components and doing so will void the warranty.
- Use the supplied usb cable to charge the Shot Scope device with usb compliant ports.
- If the device becomes submerged in a liquid, turn the device off, wipe excess liquid from the surface of the device and place the device in a dry area for 24 hours. In most cases the device should power up and function properly once completely dried. If the Handheld does not power up after following these steps contact customer support if your warranty period is still active.
- If the device comes into direct and prolonged contact with chemicals or sunscreen its appearance may be altered.
- Do not pull or apply excessive strain or force on either the Handheld or the strap. Damage to the Handheld strap may cause damage to internal electronic circuits.

GPS NOTICE

The device may experience degraded performance if you use it in proximity to any device that uses a terrestrial broadband network operating close to the frequencies used by any Global Navigation Satellite System (GNSS), such as the Global Positioning Service (GPS). Use of such devices may impair reception of GNSS signals.

RADIO FREQUENCY RADIATION EXPOSURE

This device is a mobile transmitter and receiver that uses an internal antenna to send and receive low levels of radio frequency (RF) energy for data communications. The device emits RF energy below the published limits when operating in its maximum output power mode and when used with Shot Scope authorized accessories. To comply with RF exposure compliance requirements, the device should be used as described in the user guide. The device should not be used in other configurations. This device must not be co-located or operated in conjunction with any other transmitter or antenna.

The device should only be used for the intended application as stated by the manufacturer.

POWER SPECIFICATIONS

Charging: 5V USB

BATTERY

The device has an internal Lithium Polymer rechargeable battery. The battery should only be replaced by authorized Shot Scope Technologies Ltd approved personnel. A customer should never attempt to replace the battery.

TEMPERATURE SPECIFICATIONS

Operating Temperature: 0°C to 50°C (32°F to 122°F)

Charging Temperature: 5°C to 40°C (41°F to 104°F)

Storage Temperature: -10°C to 55°C (14°F to 131°F)

PRODUCT DISPOSAL

Dispose of the Shot Scope device, battery and packaging in the accordance with local regulations. Do not dispose of the battery with regular household waste.

FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT

This equipment radiates radio frequency energy and if not used properly – that is, in strict accordance with the instructions in this manual – may cause interference to radio communications and television reception.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference that may cause undesired operation of the device.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC ID: 2AHWR-SS11

CE MARKING & EUROPEAN UNION COMPLIANCE



Products intended for sale within the European Union are marked with a (CE) mark which indicates compliance to applicable directives and European norms (EN) as follows.



Products intended for sale within the United Kingdom are marked with a (UKCA) mark which indicates compliance to applicable directives.

DECLARATION OF CONFORMITY

Shot Scope declares that this device complies with the essential requirements and relevant provisions of Directive RED 2014/53/EU.

Go to www.shotscope.com/doc to view the Declaration of Conformity.

Shot Scope Technologies Ltd
1a Nairn Road, Deans, Livingston, EH54 8AY
United Kingdom

MODE, FREQUENCY AND POWER

Mode	Frequency	Power
Bluetooth Low Energy	2.4 GHz	10mW

SOFTWARE LICENSE AGREEMENT

BY USING THE DEVICE, YOU AGREE TO BE BOUND BY THE TERMS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY. Shot Scope Technologies Ltd grant you the user a limited license to use the software embedded in this device (the "Software") in binary executable form in the normal operation of the device & product. Title, ownership rights, and intellectual property rights in and to the Software remain with Shot Scope Technologies Ltd. You acknowledge that the software is the property of Shot Scope Technologies Ltd and is protected under international copyright treaties. You further acknowledge that the structure, organization, and code of the software, for which source code is not provided, are valuable trade secrets of Shot Scope Technologies Ltd. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the software or any part thereof or create any derivative works based on the software.

Go to www.shotscope.com/legal/ for the latest terms and conditions, returns and privacy policies.

Shot Scope

To find out more information visit:

www.support@shotscope.com

Join our social pages to be kept up to date with the latest Shot Scope news:

f Facebook: **shotscope**

t Twitter: **@shotscope**

@ Instagram: **@shot_scope**

Version 1 - 16032026