



G3

Guida dell'utente
support.shotscope.com

Shot Scope



Indice

Contenuto della scatola	01
Configurazione di Shot Scope G3	02
Prima della prima partita	07
Termini e condizioni	11

Shot Scope

Contenuto della scatola

Grazie per aver acquistato Shot Scope G3. Prima di accendere il dispositivo, si prega di leggere la nostra guida dell'utente completa per assicurare una corretta configurazione.

- 1 x Shot Scope G3
- 1 x cavetto di alimentazione



Configurazione di Shot Scope G3

Passo 1: scaricare e installare la app per dispositivi mobili

Shot Scope mette a disposizione sia una app per Android che per iOS, che possono essere scaricate su qualsiasi cellulare o tablet compatibili.


Per scaricare o installare la Shot Scope app, dovete semplicemente cercare Shot Scope su App Store o Google Play Store.

Shot Scope G3 non è compatibile con l'applicazione desktop originaria: si prega di utilizzare la nuova app per dispositivi mobili aggiornata per caricare partite e aggiornare campi o firmware.



Registrazione

Per registrare un account, aprire la app e successivamente cliccare sul tasto "Registrazione". Compilare tutte le sezioni e successivamente premere il tasto "Continuare". La vostra password deve avere minimo 6 caratteri e comprendere almeno un numero.

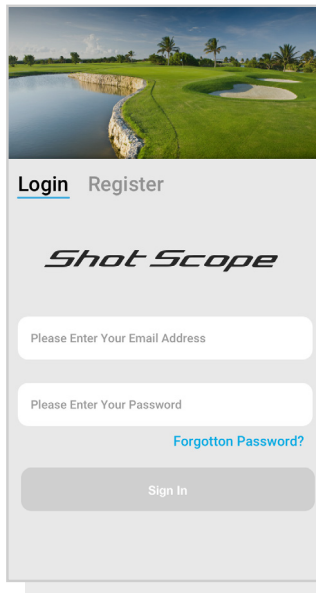


Schermata di registrazione della app

Passo 2: completare il tutorial sulla app

Al primo accesso alla Shot Scope app, dopo aver effettuato la registrazione, vi sarà mostrato un tutorial che vi illustra le modalità di utilizzo dell'orologio e della app. Nel corso di tale procedura, dovrete scegliere le impostazioni del vostro orologio e sincronizzare l'orologio per assicurarvi che su di esso sia installato l'ultimo firmware. Tale procedura deve essere completata prima di cominciare ad utilizzare l'orologio.

Passo 3: collegamento a Shot Scope

Se avete appena completato il tutorial non ci sarà bisogno di collegare di nuovo l'orologio. Se dovete collegare l'orologio all'applicazione per dispositivi mobili, attivate il Bluetooth nelle impostazioni del telefono, accedete alla app e successivamente premete il tasto "Collega" in alto sullo schermo. Sullo schermo dell'orologio comparirà dunque una schermata che vi indica che la connessione è avvenuta con successo.

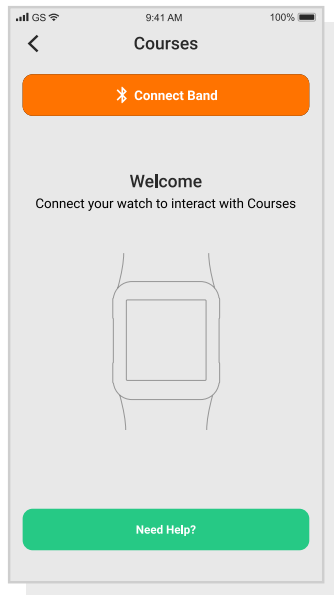


Installare il tutorial

Passo 4: controllare le mappe del campo

Vi consigliamo di controllare lo stato della mappatura di ogni campo sul quale volete giocare 48 ore prima dell'inizio della partita. Lo scopo è assicurarsi che il campo sia presente sul sistema e che sia stato mappato.

La maggior parte dei campi sono mappati e sono presenti sull'orologio, ma occasionalmente potrebbero esserci nuovi campi non ancora nel sistema o il vostro campo potrebbe essere in fase di aggiornamento.

Per vedere la lista dei campi mappati sul sistema Shot Scope, navigare nella sezione "Campi" all'interno della app. Essa si trova nella barra delle schede della app iOS o nel menu principale della app Android.

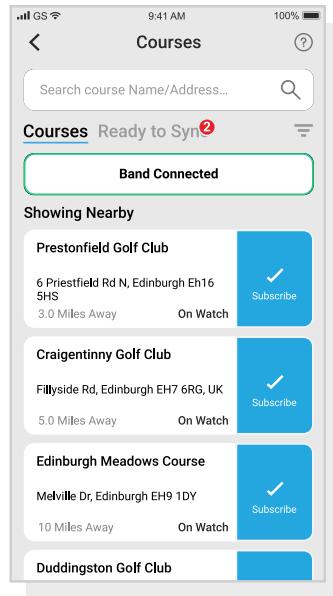

Visualizzare le mappe dei campi

Passo 5: ricerca, iscrizione e aggiunta di un campo


È possibile effettuare una ricerca all'interno del database dei campi inserendo il nome del campo o usando la propria ubicazione per trovare i campi nelle vicinanze. Utilizzare la barra di ricerca o usare il filtro in alto a destra sullo schermo per filtrare i campi a seconda della vicinanza alla propria ubicazione attuale.

Per assicurarvi di avere sempre a disposizione le mappe dei campi più aggiornate, iscrivetevi ad ogni campo dove giocate spesso per ricevere le notifiche ogni volta che la mappa del campo viene aggiornata. Per iscriversi, toccare il campo, questo s'illuminerà di blu per confermare l'operazione. Se eventuali campi da voi selezionati avessero un aggiornamento in sospeso, verranno automaticamente aggiunti alla lista di sincronizzazione.

Nel caso in cui il campo sia stato mappato, ma non si trova ancora sull'orologio, accanto ad esso figurerà il tasto "aggiungi": toccarlo e il campo sarà aggiunto automaticamente alla vostra lista di sincronizzazione.

Può darsi che il vostro campo si trovi nel database, ma che non sia ancora stato mappato. In tal caso, accanto al campo figurerà il tasto "richiedi": toccarlo per richiedere la mappatura del campo. Mediante tale operazione verrà inviata una notifica al gruppo mappature che cercherà di far mappare il campo entro 48 ore.

Nel caso in cui non riusciate a trovare il nome del campo, premere il tasto "richiedi" in basso sullo schermo. Comparirà un modulo da riempire e inviare alla nostro gruppo mappature. Anche in questo caso, cercheremo di farlo mappare entro 48 ore.

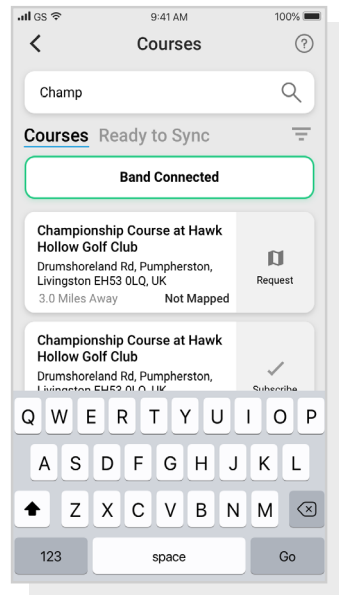


Visualizzare le mappe dei campi

Passo 6: sincronizzazione

Nel caso ci siano mappe di campi da caricare sull'orologio o eventuali aggiornamenti da trasferire sull'orologio, dovrebbe comparire una notificazione di colore rosso in alto sulla schermata dei campi. Nel caso in cui si desideri effettuare la sincronizzazione, toccare il tasto "Pronto per la sincronizzazione" nella parte superiore dello schermo.

Sulla schermata risultante comparirà la lista dei campi da sincronizzare. Premere il tasto "Sincronizza tutto" vicino alla parte superiore dello schermo per avviare la procedura.

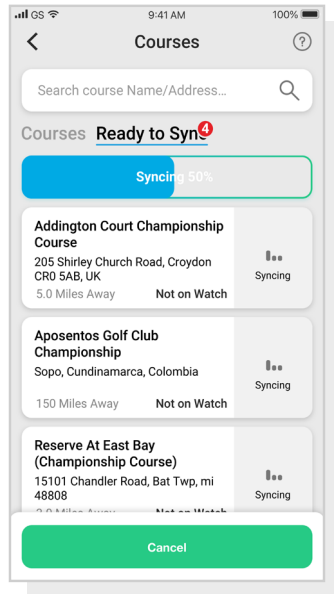


Visualizzare le mappe dei campi

Prima della prima partita

Passo 1: ricarica di Shot Scope G3

È possibile ricaricare Shot Scope mediante qualsiasi porta USB o qualsiasi caricatore a muro compatibile USB. Si prega di usare il caricabatterie fornito in dotazione con il prodotto.

Sorreggere il caricabatterie con il logo Shot Scope rivolto verso l'alto, successivamente applicare pressione sulla leva e posizionare attentamente i 4 rebbi nel retro dell'orologio. Se l'operazione viene eseguita correttamente sullo schermo comparirà la schermata di ricarica.



Agganciare il caricabatterie sulla sinistra dello schermo e collegare la USB per caricare.

Passo 2: prepararsi per giocare

Per cominciare una partita, accendere in primo luogo l'orologio premendo il tasto in alto a sinistra e successivamente sbloccarlo premendo il tasto in basso a sinistra. Dopo aver sbloccato l'orologio, premere il tasto in alto a destra accanto al segno di "spunta". Tale operazione confermerà la selezione di "Gioca".

Vi consigliamo di avviare una partita appena prima di arrivare al primo tee. In tal modo, l'orologio non terrà traccia dei dati relativi agli swing e ai putt effettuati durante il riscaldamento.



Passo 3: selezione di un corso

Dopo aver selezionato una modalità di gioco, il vostro orologio cercherà un punto GPS, operazione che dovrebbe impiegare circa 30 secondi (è possibile che la prima volta che giocate richieda più tempo). Sull'orologio comparirà una lista di campi disponibili: utilizzate i tasti destra e sinistra per trovare il campo corretto e successivamente



Passo 4: durante la partita

Blocco tasti

La funzionalità di blocco tasti disattiva i tasti durante la partita per evitare che vengano premuti inavvertitamente.

Il blocco tasti si inserisce automaticamente dopo 15 secondi di inattività. Per sbloccare, premere il tasto in basso a sinistra.

Per visualizzare i pericoli nel corso della partita, sbloccare lo schermo e l'icona dei pericoli comparirà in alto a destra.

È possibile disattivare la funzionalità di blocco schermo accedendo al menù delle impostazioni.



Schermo con blocco tasti

Scorrimento tra le buche

Quando finite in buca, l'orologio dovrebbe passare automaticamente alla buca successiva. Se doveste cambiare manualmente la buca sulla quale si trova l'orologio, è possibile farlo premendo il tasto in basso a destra per andare avanti e il tasto in basso a sinistra per tornare indietro.



Passo 4: durante la partita

Come accedere ai pericoli

Per visualizzare i pericoli relativi ad una buca, cliccare sul tasto in alto a destra accanto all'icona "!". Sarete reindirizzati alla schermata dei pericoli dove avrete accesso alle distanze da bunker e specchi d'acqua che si trovano nei pressi di quella buca. La schermata indica i primi due pericoli, ma è possibile visualizzare tutti i pericoli relativi ad una buca scorrendo mediante il tasto in alto a destra e il tasto in basso a destra. Per tornare alla schermata delle iarde al termine di tale procedura, premere il tasto in alto a sinistra accanto alla freccia indietro.



Icona di pericolo
(in alto a destra)



Schermata di pericolo



Fine della partita

Concludere una partita

Al termine della diciottesima buca vi verrà automaticamente chiesto se volete concludere la partita. Premere il tasto in alto a destra per confermare la propria intenzione di concludere la partita. Se non si desidera concludere la partita premere il tasto in basso a destra fino a che non verrà visualizzata l'opzione "Continua" e successivamente premere il tasto in alto a destra per confermare. È possibile concludere manualmente una partita in qualsiasi momento premendo il tasto in alto a sinistra e successivamente scorrendo tra le opzioni fino a raggiungere l'opzione di "Termina la partita". Premendo il tasto in alto a destra la partita verrà conclusa e tornerete alla schermata iniziale.

Andare su www.shotscope.com/getstarted
per domande frequenti, tutorial e assistenza al cliente

Shot Scope Technologies Ltd

LIMITED WARRANTY & SAFETY INFORMATION

FOR CONSUMERS PROTECTED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE. THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS.

Shot Scope Technologies Ltd products are warranted to be free from defects in materials, components and workmanship through normal use. The Warranty Period begins on the date of purchase from Shot Scope Technologies Ltd and lasts for a period of (12) months for a new product.

If a defect in material, component or workmanship is discovered within the Warranty Period you must notify Shot Scope Technologies Ltd in writing. In no event shall such notifications be received by Shot Scope Technologies Ltd later than 14 days after the expiration of the Warranty Period. Shot Scope Technologies Ltd will, at its sole option, repair or replace any materials or components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labour, provided that the customer shall be responsible for any shipping and transportation cost. All returns must be shipped to Shot Scope Technologies Ltd service centre for assessment prior to repair or replacement.

The product is intended to be used only as a performance tracking device for sport and must not be used for any other purpose requiring precise measurement of direction, distance, location or topography. Shot Scope Technologies Ltd makes no warranty as to the accuracy or completeness of map data in this product.

Shot Scope Technologies Ltd retains the exclusive right to repair or replace (with a new or newly-overhauled replacement product) the device or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY. Contact support@shotscope.com for a returns form and further instructions. A copy of the original sales receipt, is required as the proof of purchase for warranty services. The customer is responsible for all shipping and transportation costs, for shipping details contact Shot Scope Technologies Ltd.

EXCLUSIONS AND LIMITATIONS

This limited warranty extends only to products purchased from Shot Scope Technologies Ltd or an authorized reseller.

This warranty does not apply to: (i) cosmetic damage such as scratches and dents; (ii) consumable parts, such as batteries, unless product damage has occurred due to a defect in materials, component or workmanship; (iii) damage caused by accident, abuse, water, flood, fire, or other acts of nature or external

causes; (iv) damage caused by service performed by anyone who is not an authorized service provider of Shot Scope Technologies Ltd; (v) damage to a product that has been modified or altered without written permission of Shot Scope Technologies Ltd; or (vi) damage to a product that has been not been charged or powered in accordance with the charging and powering instructions provided by Shot Scope Technologies Ltd; (vii) the product is supplied or licensed for beta, evaluation, testing or demonstration purposes for which Shot Scope Technologies Ltd does not charge a purchase price.

To the maximum extent permitted by applicable law.

All software and services provided by Shot Scope Technologies Ltd, including factory loaded software is provided "AS IS" without warranty of any kind. Without limiting the foregoing, Shot Scope Technologies Ltd does not warrant that the operation of the product, software or services will be error free. Shot Scope Technologies Ltd does not warrant that any equipment, system or network that the product software or services are used in conjunction with will be error free.

TO THE EXTENT NOT PROHIBITED BY APPLICABLE LAW

ALL IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE WARRANTY PERIOD. ALL OTHER EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF NON-INFRINGEMENT ARE DISCLAIMED.

To the extent not prohibited by applicable law, in no event will Shot Scope Technologies Ltd be liable for: (i) lost or erased data in connection with repair or replacement of a device; (ii) loss of revenue or profit; (iii) loss of the ability to use third party products or services; (iv) or for special, indirect, consequential, incidental or punitive damages, regardless of the theory of liability (including negligence). In the event where Shot Scope Technologies Ltd has been advised of the possibility of damages. To the extent not prohibited by applicable law, in no event will Shot Scope Technologies Ltd liability exceed the amount paid by you the consumer for the product.

Unless modified in writing by Shot Scope Technologies Ltd this limited warranty is understood to be the complete and exclusive agreement between you and Shot Scope Technologies Ltd. Superseding all prior agreements, oral or written, and all other communications between you and Shot Scope Technologies Ltd. No Shot Scope Technologies Ltd employee, agent or reseller is authorized to make any verbal or written modification, extension or addition to this limited warranty.

ONLINE AUCTION PURCHASES

Products purchased through online auctions are not eligible for warranty coverage. Online auction confirmations are not accepted for warranty verification. To obtain warranty services, an original or copy of the sales receipt from the original retailer is required.

TECHNICAL SUPPORT

This limited warranty is neither a service nor a support contract. Answers to technical support questions can be found at:

support.shotscope.com

SAFETY INFORMATION & HEALTH WARNINGS

For your personal safety and to avoid damage to device follow safety information guidelines detailed below. Failure to avoid the following potentially hazardous situations could result in serious injury:

- Always consult your Physician/Doctor before beginning or modifying any exercise program. If you have a pacemaker or other implanted electronics device, consult your Physician/Doctor before using any electronic devices from Shot Scope Technologies Ltd.
- Do not clean or wear the device when you are charging it. Always unplug the device first before cleaning it.
- Do not expose the device or any other electronics product used to charge the device to liquid, moisture, humidity, or rain whilst charging the device. Exposure to water or moisture during charging could result in damage to the electronics circuits and may result in failure or explosion.
- Do not pull or apply excessive strain or force on either the watch or the strap. Damage to the watch strap may cause damage to internal electronic circuits.
- Only use the device as detailed in the user manual.

BATTERY WARNINGS

If these guidelines are not followed, the internal lithium-ion battery may experience a shortened life span or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not charge or use the unit in a car or similar place where the inside temperature may be over 45 degrees Celsius (113°F). To prevent damage, remove the device from the vehicle or store it out of direct sunlight, such as in the glove box.
- Do not disassemble, modify, re-manufacture, puncture or damage the device.
- Do not short circuit the battery or device by bringing the terminals in contact with metal or another object. This could cause personal injury, explosion or fire.
- Do not immerse or expose the device to water, other liquids, fire, explosion, or any other hazard.
- Do not shock the battery by dropping or throwing it.
- Do not operate the device outside of the temperature ranges specified in the temperature specifications in this manual.
- If the device or battery shows any type of damage, such as bulging, swelling or disfigurement. Discontinue use immediately and contact Shot Scope Technologies Ltd.
- Keep any exposed battery out of reach of infants or small children.

CARE GUIDELINES

- Avoid extreme shock and harsh treatment, because it can degrade the life of the device.
- Only use a damp cloth or paper towel with water to clean the device. Do not spray with any chemicals to clean the device.
- Do not expose the device to extremely high or low temperatures.
- Do not bring the device into contact with any sharp objects. This could cause damage or scratches.
- Do not attempt to repair, modify or disassemble your Shot Scope watch; it does not contain any user-serviceable components and doing so will void the warranty.
- Use the supplied usb cable to charge the Shot Scope watch with usb compliant ports.
- If the device becomes submerged in a liquid, turn the device off, wipe excess liquid from the surface of the device and place the device in a dry area for 24 hours. In most cases the device should power up and function properly once completely dried. If the watch does not power up after following these steps contact customer support if your warranty period is still active.

GPS NOTICE

The device may experience degraded performance if you use it in proximity to any device that uses a terrestrial broadband network operating close to the frequencies used by any Global Navigation Satellite System (GNSS), such as the Global Positioning Service (GPS). Use of such devices may impair reception of GNSS signals.

RADIO FREQUENCY RADIATION EXPOSURE

This device is a mobile transmitter and receiver that uses an internal antenna to send and receive low levels of radio frequency (RF) energy for data communications. The device emits RF energy below the published limits when operating in its maximum output power mode and when used with Shot Scope authorized accessories. To comply with RF exposure compliance requirements, the device should be used as described in the user guide. The device should not be used in other configurations. This device must not be co-located or operated in conjunction with any other transmitter or antenna.

The device should only be used for the intended application as stated by the manufacturer.

POWER SPECIFICATIONS

Charging: 5V USB

BATTERY

The device has an internal Lithium Polymer rechargeable battery The battery should only be replaced by authorized Shot Scope Technologies Ltd approved personal. A customer should never attempt to replace the battery.

TEMPERATURE SPECIFICATIONS

Operating Temperature: 0°C to 50°C (32°F to 122°F)

Charging Temperature: 5°C to 40°C (41°F to 104°F)

Storage Temperature: -10°C to 45°C (14°F to 113°F)

PRODUCT DISPOSAL

Dispose of the Shot Scope device, battery and packaging in the accordance with local regulations. Do not dispose of the battery with regular household waste.

FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT

This equipment radiates radio frequency energy and if not used properly – that is, in strict accordance with the instructions in this manual – may cause interference to radio communications and television reception.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference that may cause undesired operation of the device.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC ID: 2AHWR-SS04

CE MARKING & EUROPEAN UNION COMPLIANCE



Products intended for sale within the European Union are marked with a (CE) mark which indicates compliance to applicable directives and European norms (EN) as follows.

DECLARATION OF CONFORMITY

Shot Scope declares that this device complies with the essential requirements and relevant provisions of Directive RED 2014/53/EU.

Go to www.shotscope.com/doc to view the Declaration of Conformity.

Shot Scope Technologies Ltd

**Unit 27, Castlebrae Business Centre, 40 Peffer Place, Edinburgh, EH16 4BB,
United Kingdom**

MODE, FREQUENCY AND POWER

Mode	Frequency	Power
Bluetooth Low Energy	2.4 GHz	10mW
RFID	13.56 MHz	<1mW

SOFTWARE LICENSE AGREEMENT

BY USING THE DEVICE, YOU AGREE TO BE BOUND BY THE TERMS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY. Shot Scope Technologies Ltd grant you the user a limited license to use the software embedded in this device (the "Software") in binary executable form in the normal operation of the device & product. Title, ownership rights, and intellectual property rights in and to the Software remain with Shot Scope Technologies Ltd. You acknowledge that the software is the property of Shot Scope Technologies Ltd and is protected under international copyright treaties. You further acknowledge that the structure, organization, and code of the software, for which source code is not provided, are valuable trade secrets of Shot Scope Technologies Ltd. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the software or any part thereof or create any derivative works based on the software.

Go to www.shotscope.com/legal/ for the latest terms and conditions, returns and privacy policies.

Shot Scope

Per maggiori informazioni, andare su:

www.support@shotscope.com

Iscrivetevi alle nostre pagine social per rimanere aggiornati sulle ultimissime notizie relative a Shot Scope:

f Facebook: [shotscope](#)

t Twitter: [@shotscope](#)

i Instagram: [@shot_scope](#)

Versione 2 - 240621